


INSTRUCTIONS FOR INSTALLING YOUR DROPSTITCH FLOOR

*AdvancedFrame™ Shown in Illustration.
The DropStich Floor installs similarly in each model.*

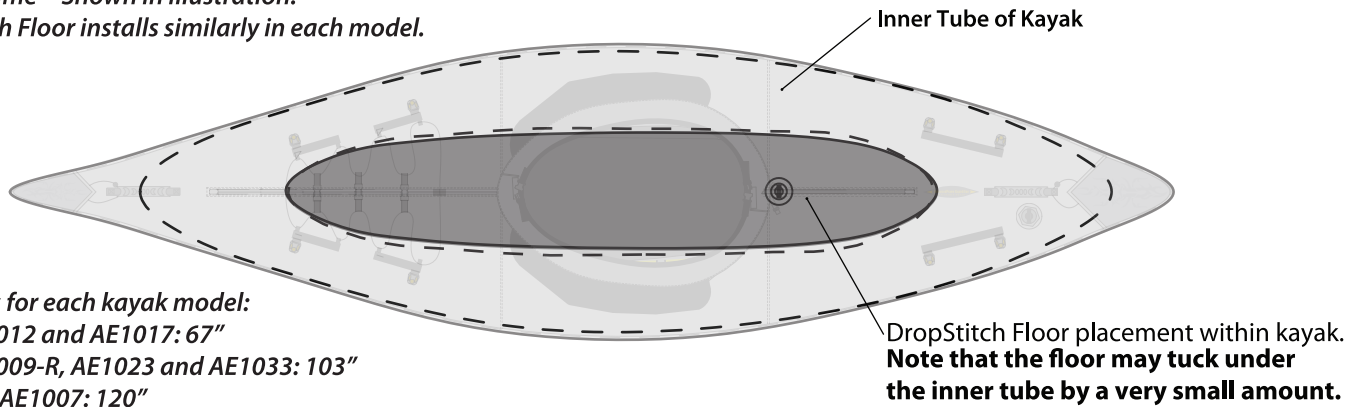

*Floor lengths for each kayak model:
AE1002, AE1012 and AE1017: 67"
AE1009, AE1009-R, AE1023 and AE1033: 103"
AE 1004 and AE1007: 120"*

- STEP 1.** Unfold your kayak and lay it out top side up. **Note:** If a standard floor was included with your kayak, and this floor is intended as an upgrade or replacement floor for your kayak, make sure to remove the standard floor before proceeding.
- STEP 2.** Place the DropStich Floor inside of the kayak as shown in the illustration above. The floor valve should be facing up and be at the rear of the kayak. In order to fully position the floor, you may have to open the zippers on the deck of the kayak to aid in positioning.
- STEP 3.** Once the floor is inside of the kayak, make sure that it is centered. There will be a little bit of overlap between the Inner Tube and the floor, so do your best to make sure that any overlap is evenly distributed.
- STEP 4.** After centering the floor, proceed with fully inflating the kayak by following the instructions in the Owner's Manual or on the gray inflation tag at the rear of the kayak.
- Special Note:** If you are using the DropStich floor in conjunction with the Single Deck Conversion on the AdvancedFrame Convertible, do not fully inflate the kayak at this point! Before you attach the Deck Conversion onto your kayak, partially inflate the kayak and then proceed to the next step. Once you have fully inflated the floor, attach the Deck Conversion and fully inflate the kayak.
- STEP 5.** After fully inflating the kayak, use the valve attachment supplied with the DropStich Floor and inflate the floor until firm (approx 4 - 6 psi). To set up the valve attachment for use, you will need to seat the clear tubing on the attachment onto the appropriate adaptor on the pump hose. SEE IMAGE. **Note:** The valve attachment for your floor is located with the included repair kit.



- STEP 6.** Once you have fully inflated the kayak and DropStich Floor, check to make sure that the floor is centered. There may be some tucking at the front and the rear of the floor, but the sides should rest within the inside perimeter of the Inner Tube.

For visual tutorials on how to install the DropStich Floor visit our youtube site @ www.youtube.com/advancedelements